

Features

1. 300A 400A 5_ [;
Intermittent 300A, maximum 400A can be used for 5min.
2. ;
It has one set of normally open contacts.
3. 24V ;
Coil power consumption 0.24W.
4. 100? (1000HDC) 2] H;
The insulation resistance reaches 100M_ @

at23


Performance Parameters at23

Contact Arrangement	1K (1@A)	
	5_	
	80_ H (Sf 150A)	
	7W 1e	30_ e
	-40 p55	10_ e
	? 8	50HI /60HI 1500HAC/1_ [
	3.5Y,10p200HI ,1/2	50HI /60HI 1500HAC/1_ [
	5 p95 DH	100? 1_ [
	71j 71j 68.5_ _	50? 1_ [
	100000 (12H/300A)	50Y
	8-10@_	
/	/	


ADD300IJ ADD300IJ Coil Parameters

Coil Voltage	Pull-In Voltage	Drop-Out Voltage	Coil Resistance	Coil Power Consumption
12H	70% Ge	5% -40% Ge	6 Ω 10%	24I Ω 10%
24H	70% Ge	5% -40% Ge	24 Ω 10%	24I Ω 10%
36H	70% Ge	5% -40% Ge	54 Ω 10%	24I Ω 10%
48H	70% Ge	5% -40% Ge	96 Ω 10%	24I Ω 10%
60H	70% Ge	5% -40% Ge	150 Ω 10%	24I Ω 10%
72H	70% Ge	5% -40% Ge	216 Ω 10%	24I Ω 10%

Model Coding

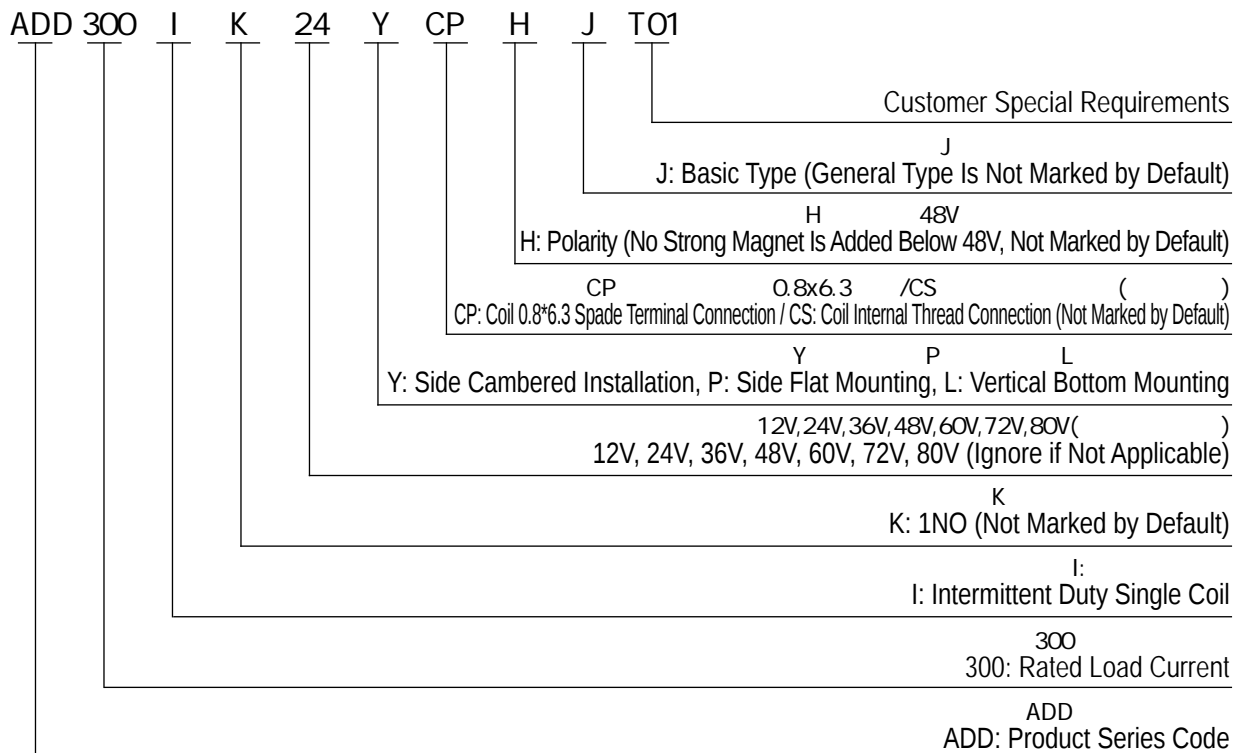

Wiring Diagram

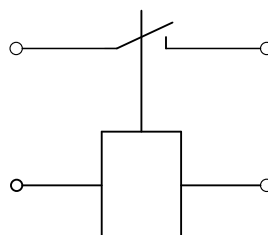


A1, A2
A1&A2 Main Terminals

1, 2
1&2 Coil Terminals

ADD300IJ
ADD300IJ I [d] Y D[SY]d_

Outline Installation Dimension Drawing

ADD300IJ

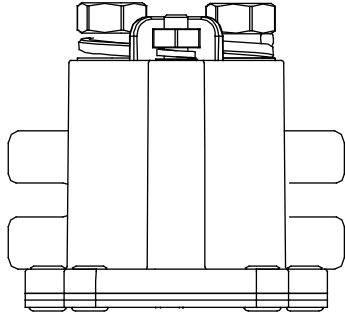

2-? 8
Load Wiring 2-M8
8-10@._
Torque 8-10N.m

2-? 5
Load Wiring 2-M5
2-3@._
Torque 2-3N.m

ADD300IPJ

2-? 8
Load Wiring 2-M8
8-10@._
Torque 8-10N.m

2-? 5
Load Wiring 2-M5
2-3@._
Torque 2-3N.m


Outline Installation Dimension Drawing

ADD300ILJ

2-? 8
Load Wiring 2-M8
8-10@_ _
Torque 8-10N.m

2-? 5
Load Wiring 2-M5
2-3@_ _
Torque 2-3N.m

ADD300IYCPJ


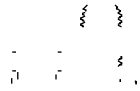


2-? 8
Load Wiring 2-M8
8-10@_ _
Torque 8-10N.m

F=0.8j 6.3
Coil Wiring T=0.8*6.3
Spade Terminal

Outline Installation Dimension Drawing

ADD300IPCPJ

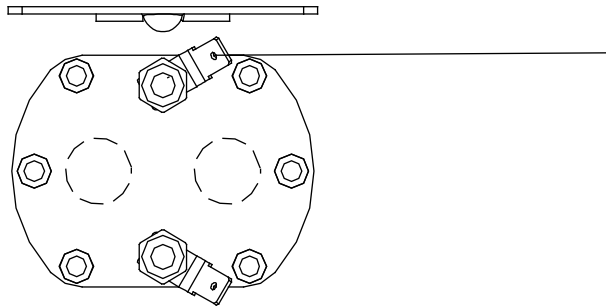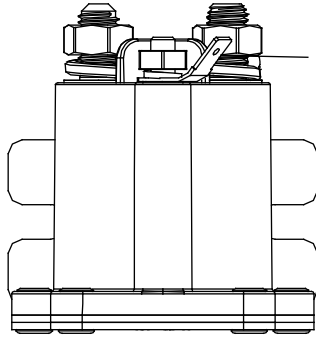

2-? 8
Load Wiring 2-M8
8-10@_ _
Torque 8-10N.m

F=0.8j 6.3
Coil Wiring T=0.8*6.3
Spade Terminal

ADD300ILCPJ

2-? 8
Load Wiring 2-M8
8-10@_ _
Torque 8-10N.m

F=0.8j 6.3
Coil Wiring T=0.8*6.3
Spade Terminal

Usage Cautions

1.

This document is only for customer selection reference, AOKAI has tried the best to ensure the accuracy of the information in this document. Product specifications and parameters may be changed due to product improvement etc., they may be inconsistent because of not updated in time. For the specific parameters and performance of each product, please refer to the samples provided by AOKAI and the corresponding signed and controlled specification.

2.

Regarding the application of this product, please select the matching product according to your specific use conditions and environmental requirements when selecting the product. If the requirements are not clearly specified, please contact AOKAI to obtain more technical support.

3.

When installing and using this product, regardless of wiring or fixed installation, it is required to use anti-loose spring washers.

4.

The torque for installing fasteners should be within the standard range required by this specification. It may cause the unstable installation or damaging the product if the torque is lower than the minimum torque or higher than the maximum torque.

5.

Do not install the contactor in places with strong magnetic fields (such as transformers or strong magnets), or close to objects with thermal radiation. It is recommended to use it with a cooling fan.

6.

30U_

It is forbidden to use the product that have been dropped from a high place (height \geq 30cm).

7.

It is forbidden to use the product in an environment with oil pollution, especially before wiring, it will seriously affect the main terminals conductivity if they are polluted by oil pollution, and affect the product life.

8.

It is forbidden to use the product beyond the rated electrical life. When the rated electrical life is reached, although the product can continue to work, there is a risk of failure, explosion, and burning because of non-breaking.

9.

This product cannot be used as a protector, and the circuit must be connected with a protector in series when using.

10.

AOKAI only does the resistive electrical life verification and quality assurance. When the product is used in an environment with inductive load or capacitive load, it is recommended that the circuit should be connected in parallel with a surge protection device.

11.

After continuous work, restarting immediately after disconnection will affect the pull-in voltage because the product is in a hot state, and the pull-in voltage will increase, which is a reasonable phenomenon.

12.

It is strictly prohibited to wiring when power on.