

Features

1. 200A ;
Continuous 200A load.
2. ;
It has one set of normally open contacts.

at23
Performance Parameters at23

Contact Arrangement	1K (1NO)	
	0.5m	
	80mV (at 200A)	
	7le, 1s	30ms
	-40 ~85	30ms
	M8	50Hz/60Hz 1500VAC/1min
	3.5g,10~200Hz,1/2	50Hz/60Hz 1500VAC/1min
	5 ~95 RH	100M 1min
	85x56x86mm	50M 1min
	20000	5g
	6-10N.m	
/	/	

AZJ 200S AZJ200S Coil Parameters


Coil Voltage	Pickup Voltage	Dropout Voltage	Coil Resistance	Coil Power Consumption
12V	70% U _s	5% -40% U _s	16 ± 10%	9W± 10%
24V	70% U _s	5% -40% U _s	63 ± 10%	9W± 10%
36V	70% U _s	5% -40% U _s	144 ± 10%	9W± 10%
48V	70% U _s	5% -40% U _s	256 ± 10%	9W± 10%
60V	70% U _s	5% -40% U _s	400 ± 10%	9W± 10%
72V	70% U _s	5% -40% U _s	576 ± 10%	9W± 10%

AZJ 200D AZJ200D Coil Parameters


Coil Voltage	Pickup Voltage	Dropout Voltage	Coil Resistance		Starting Power	Holding Power
			Starting	Holding		
12V	70% U _s	5% -40% U _s	2 ± 10%	48 ± 10%	72W± 10%	4W± 10%
24V	70% U _s	5% -40% U _s	7.5 ± 10%	190 ± 10%	75W± 10%	4W± 10%
36V	70% U _s	5% -40% U _s	17.5 ± 10%	430 ± 10%	75W± 10%	4W± 10%
48V	70% U _s	5% -40% U _s	31 ± 10%	768 ± 10%	75W± 10%	4W± 10%
60V	70% U _s	5% -40% U _s	48 ± 10%	1200 ± 10%	75W± 10%	4W± 10%
72V	70% U _s	5% -40% U _s	68 ± 10%	1500 ± 10%	75W± 10%	4W± 10%

Model Coding


AZJ 200 S K 24 P FS T01

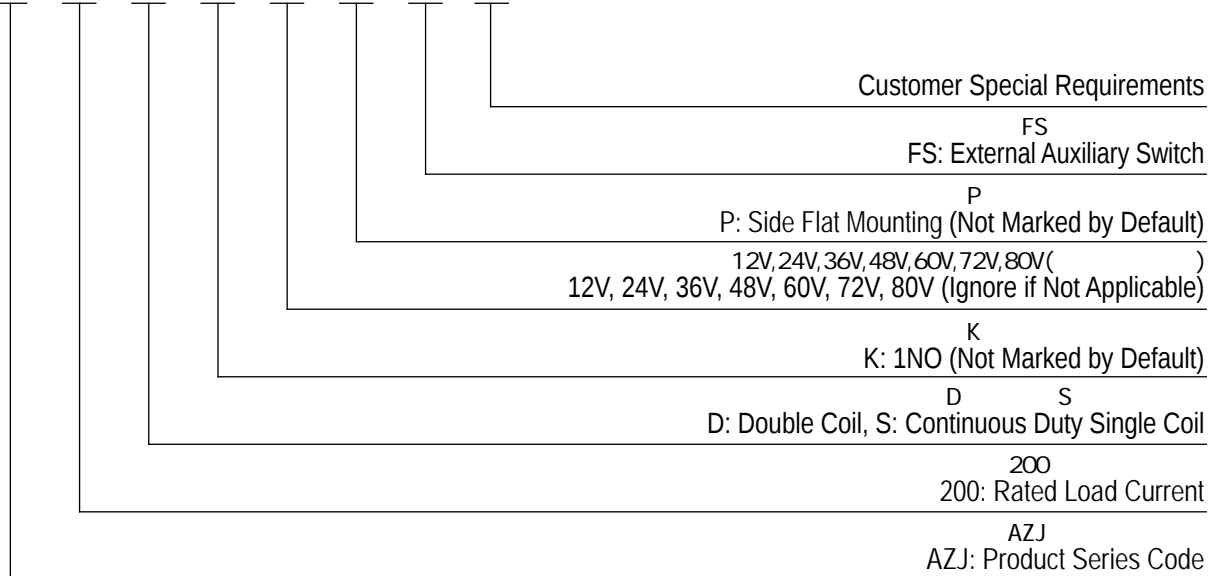


Wiring Diagram

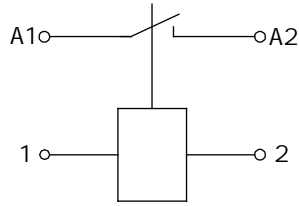


AZJ200S()
AZJ200S Wiring Diagram
Without Auxiliary Switch

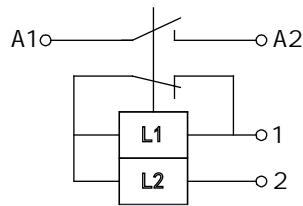

AZJ200D()
AZJ200D Wiring Diagram
Without Auxiliary Switch

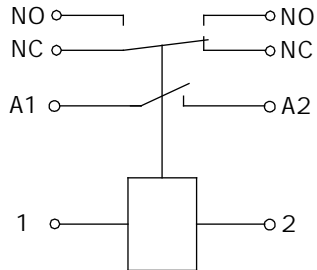

AZJ200S()
AZJ200S Wiring Diagram
with Auxiliary Switch

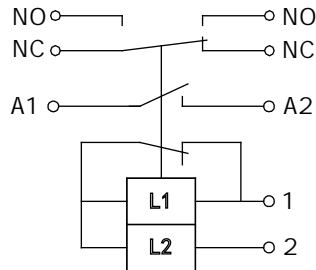

AZJ200D()
AZJ200D Wiring Diagram
with Auxiliary Switch

NC
NC Auxiliary Switch Normally
Closed Contact


NO
NO Auxiliary Switch Normally
Open Contact

A1,A2
A1, A2 Main Terminal Wiring


1,2 12-72V
1, 2 Coil Wiring 12-72V

Outline Installation Dimension Drawing

Without Auxiliary Switch

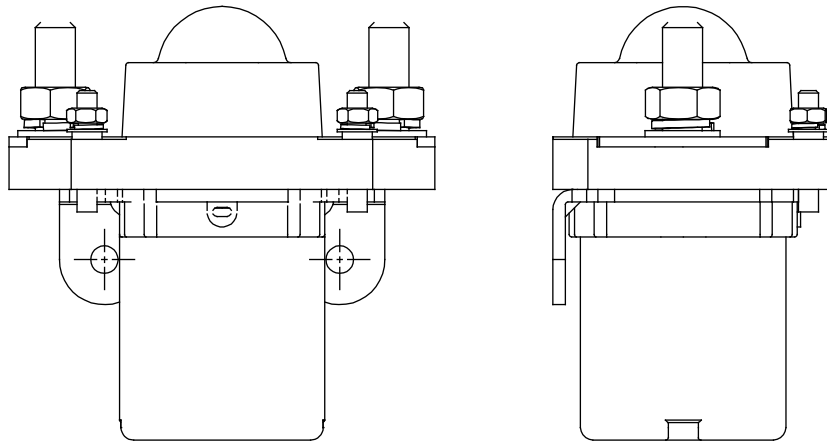

Mounting Hole Distance 47 \pm 0.5

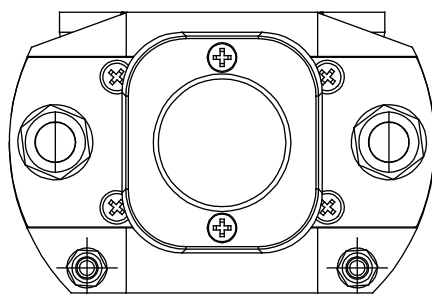

2-M8
Load Wiring 2-M8
6-10N.m 12N.m Max
Torque 6-10N.m 12N.m Max

2-M4
Load Wiring 2-M4
1.2-2N.m 2.0N.m Max
Torque 1.2-2N.m 2.0N.m Max



Usage Cautions

1.

This document is only for customer selection reference, AOKAI has tried the best to ensure the accuracy of the information in this document. Product specifications and parameters may be changed due to product improvement etc., they may be inconsistent because of not updated in time. For the specific parameters and performance of each product, please refer to the samples provided by AOKAI and the corresponding signed and controlled specification.

2.

Regarding the application of this product, please select the matching product according to your specific use conditions and environmental requirements when selecting the product. If the requirements are not clearly specified, please contact AOKAI to obtain more technical support.

3.

When installing and using this product, regardless of wiring or fixed installation, it is required to use anti-loose spring washers.

4.

The torque for installing fasteners should be within the standard range required by this specification. It may cause the unstable installation or damaging the product if the torque is lower than the minimum torque or higher than the maximum torque.

5.

Do not install the contactor in places with strong magnetic fields (such as transformers or strong magnets), or close to objects with thermal radiation. It is recommended to use it with a cooling fan.

6.

30cm

It is forbidden to use the product that have been dropped from a high place (height \geq 30cm).

7.

It is forbidden to use the product in an environment with oil pollution, especially before wiring, it will seriously affect the main terminals conductivity if they are polluted by oil pollution, and affect the product life.

8.

It is forbidden to use the product beyond the rated electrical life. When the rated electrical life is reached, although the product can continue to work, there is a risk of failure, explosion, and burning because of non-breaking.

9.

This product cannot be used as a protector, and the circuit must be connected with a protector in series when using.

10.

AOKAI only does the resistive electrical life verification and quality assurance. When the product is used in an environment with inductive load or capacitive load, it is recommended that the circuit should be connected in parallel with a surge protection device.

11.

After continuous work, restarting immediately after disconnection will affect the pull-in voltage because the product is in a hot state, and the pull-in voltage will increase, which is a reasonable phenomenon.

12.

It is strictly prohibited to wiring when power on.